

Link & Lock Intrepid

Installation Guidelines


Table of Contents

| | |
|--|-----------|
| Critical Details | 3 |
| Material Specifications | 4 |
| Finishes | 4 |
| Expansion and contraction | 4 |
| Material ordering and deliveries | 4 |
| Storage and handling | 4 |
| Cleaning | 4 |
| Warranty | 4 |
| Graffiti Removal | 5 |
| Components | 6 |
| Components (Typical) | 6 |
| Tools/Cutting/Fastening | 7 |
| Tools | 7 |
| Cutting | 7 |
| Fastening | 8 |
| Fastener types | 8 |
| Framing/Furring requirements | 9 |
| System Install | 10 |
| Install details | 10 |
| Typical dimensions | 10 |
| System layout & Install steps | 11 |
| Perimeter and field area limitations | 11 |
| Cantilever limits | 11 |
| Preparation drilling for Install | 12 |
| Butt-Joints & Lap Joints | 13 |
| Batten orientation | 14 |
| Fin orientation | 15 |
| End to End orientation | 16-17 |
| Link & Lock HD | 18 |
| 4x4 & 4x6 Link & Lock | 19 |
| Appendix | 20 |
| Tables 1 & 2 - Expansion & contraction | 20 |
| Tables 3-8 – Allowable attachment span | 21-26 |
| Sound Absorption (NRC & SAA) | 26 |
| Handling and care of products | 27 |
| Contact Info | 28 |

CRITICAL DETAILS



CUT TAPED/DRILLED ENDS

CUT taped/drilled ends.

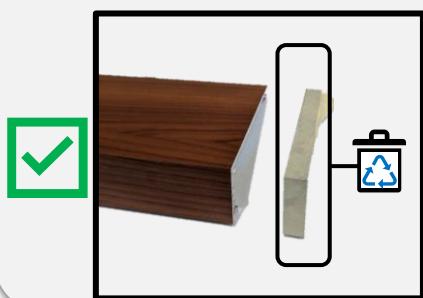

LAP JOINTS

Overlap L&L joints min 2ft.

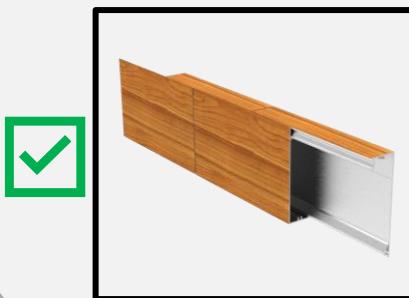
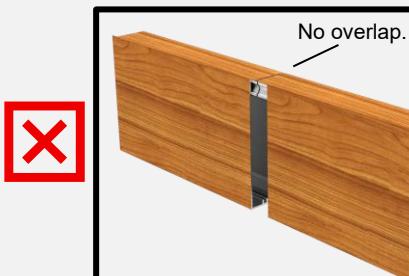


THERMAL MOVEMENT



Drill $\frac{1}{2}$ " oversized holes to allow for thermal expansion & contraction and use Mounting Clips and Isolation Washers.





FASTENERS

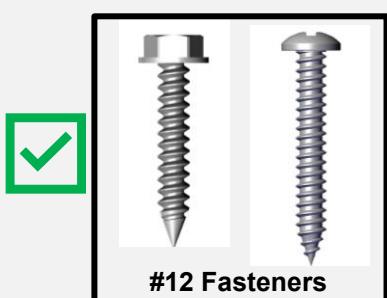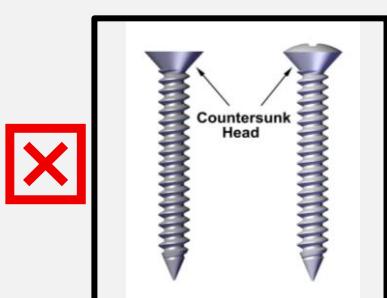

HARD FASTENER

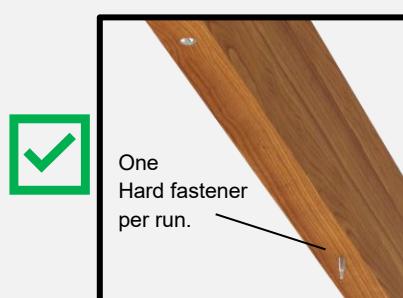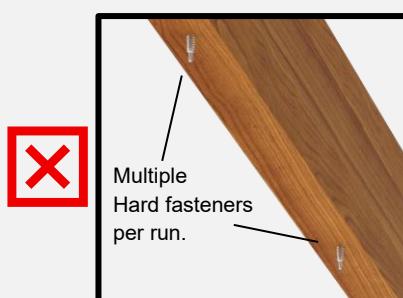

CANTILEVER

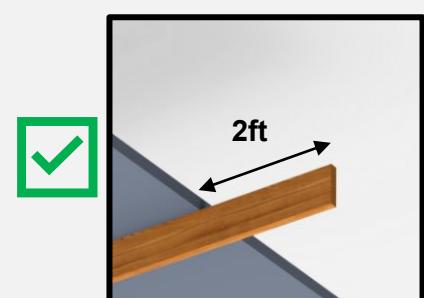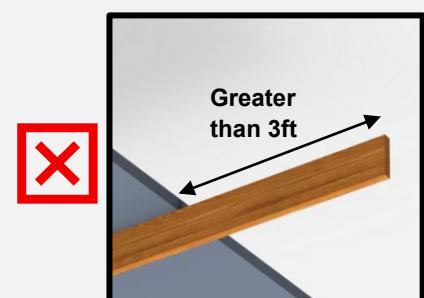

Material Specifications

Finishes

- Longboard Products are available in a wide range of powder coated finishes
- Custom solid colors are available upon request

All Longboard Products are produced 1" (25mm) oversized, as one end is drilled for the coating process and both ends have 1/2" (12mm) of masking tape (woodgrains only) which must be cut off for best results.

Expansion & Contraction

Although interior applications likely will not experience a large degree of temperature change, it is good practice to follow the standard attachment procedure described in this guide. See **Appendix for Tables 1 & 2, expansion/contraction calculations per foot/meter of material.**

Material Ordering & Delivery

- Packaging: Link & Lock is sold by the set (pair) and in widths of 2", 4", 6", 8"
End caps are sold by the box: 20 caps/bx
End Mounts are sold by the box: 20 mounts/bx
- Ship/Receiving: Delivered on 24' (7.3m) long skids weighing up to 2000 lbs. A mechanical lift with forks is required on site to receive the order.
- QC: Always inspect the delivery for damage and contact LB ASAP if there are any issues: info@longboardproducts.com or 1-800-604-0343 and include your PO# and any pictures if possible. Mark the delivery receipt as "damaged" and accept the delivery as-is. Longboard is not responsible for the installation of blemished or damaged material.

Storage & Handling

Be sure to store the material flat, keep it dry, safe & secure and remain in unopened cartons until ready to be installed. See **Appendix for proper handling and care instructions.**

Cleaning Recommendations

- Initial and periodic cleaning for best looking product
- Basic methods use a combination of moderate water pressure, soft sponge/brush and a mild detergent (Safe for your hands, safe for the product)

⚠ NEVER use aggressive, acid or alkaline cleaners on Longboard finishes. Do not use cleaners containing Trisodium Phosphate, Phosphoric Acid, Hydrochloric Acid, Hydrofluoric Acid, Fluorides, or any other compound that is known to react with metal.

*See **Cleaning Guide for full requirements & cleaning schedule:**


longboardproducts/resources/care-maintenance.com

Warranty

Upon substantial completion of the project, register for warranty online here: longboardproducts.com/warranty

⚠ Registration is required for the warranty to be in effect.

Graffiti Removal



D2000 Solid Color

| | Prosoco Cleaner | MEK Solvent | |
|-------------------------|-------------------------------------|-------------------------------------|---|
| Permanent Marker | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |  |
| Oil Based Spray Paint | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |  |
| Water Based Spray Paint | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | |
| Adhesive Tape | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | |

Prosoco Anti-Graffiti Cleaner

SPECIAL ORDER - EXT. LEAD TIMES CONTACT LB

Anti-Graffiti High Gloss Woodgrain

| | MEK Solvent | |
|-------------------------|-------------------------------------|---|
| Permanent Marker | <input checked="" type="checkbox"/> |  |
| Oil Based Spray Paint | <input checked="" type="checkbox"/> | |
| Water Based Spray Paint | <input checked="" type="checkbox"/> | |
| Adhesive Tape | <input checked="" type="checkbox"/> | |

MEK Solvent

Note: Cleaning the surface with a cleanser that is not diluted as per instructions, may result in damage to the coating.

Components

Components (Typical)

The Link & Lock™ system consists of two (2) matching L-shaped extrusions, snapped together to make a complete set. For all LB components go to longboardproducts.com.

Link & Lock™ Battens

| Size | 12' | 24' | End Caps (20/box) | End Mounts (20/box) |
|-----------|-----------|-----------|----------------------|------------------------|
| 2" | 2X2LL.145 | 2X2LL.289 | 2LLEC.2 | 2LLEM.2 |
| 4" | 2X4LL.145 | 2X4LL.289 | 2LLEC.4 | 2LLEM.4 |
| 6" | 2X6LL.145 | 2X6LL.289 | 2LLEC.6 | 2LLEM.6 |
| 8" | 2X8LL.145 | 2X8LL.289 | 2LLEC.8 | 2LLEM.8 |



Link & Lock™ Batten Link & Lock™ HD Batten

Link & Lock™ HD Battens

| | | | | |
|-----------|-------------|-------------|-----------|-----------|
| 4" | 2X4LLHD.145 | 2X4LLHD.289 | 2LLHDEC.4 | 2LLHDEM.4 |
| 6" | 2X6LLHD.145 | 2X6LLHD.289 | 2LLHDEC.6 | 2LLHDEM.6 |
| 8" | 2X8LLHD.145 | 2X8LLHD.289 | 2LLHDEC.8 | 2LLHDEM.8 |



Link & Lock™ Box Battens

Link & Lock™ Box Battens

| | | | | |
|---------------|-----------|-----------|---------|---|
| 4 x 4" | 4X4LL.145 | 4X4LL.289 | 4LLEC.4 | - |
| 4 x 6" | 4X6LL.145 | 4X6LL.289 | 4LLEC.6 | - |

| Mounting Accessories | Qty | SKU |
|------------------------------------|---------|------------|
| Link & Lock Mounting Clip | 48, bag | LLMC.N48 |
| Link & Lock™ Isolation Washer | 48, bag | LLIW.N48 |
| Dewalt® 1/2" Pilot Point Drill Bit | 1 | DRILLBT.05 |



L&L Mounting Clip



Isolation Washer



1/2" Pilot Point

Tools/Cutting/Fastening

Tools


Commonly used tools for Link & Lock install.

| | | | |
|--|--|----------------------------------|---------------------------|
| | | | |
| Table Saw with Carbide Metal Blade Non-ferrous 60-80T (for cutting aluminum) | Miter Saw with Carbide Metal Blade Non-ferrous 60-80T (for cutting aluminum) | Cordless Drill with clutch | Jig Saw (for protrusions) |
| | | | |
| Rubber Mallet (or Hammer) | Level | Hole Saw (for lighting fixtures) | Quick Grip Bar Clamp |

Cutting

Always be sure to wear appropriate PPE: eye & hearing protection.

Cut battens using a Miter Saw and Table Saw always allowing for expansion & contraction. Trim the taped/drilled ends of all stock length material by at least **1/2" (12mm) each end** and discard.

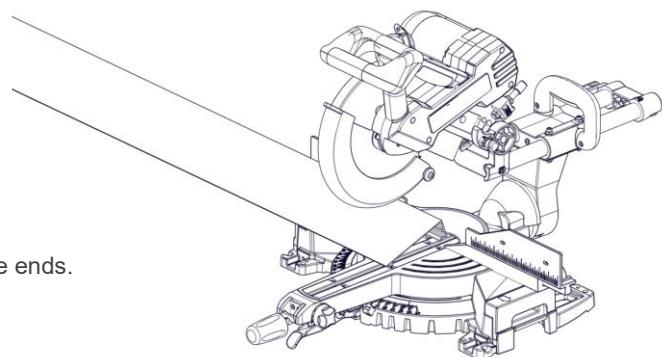

DO NOT Install Link & Lock without trimming the ends.

Fastening

⚠ Always consult the project engineer, architect or authority having jurisdiction to understand the project specific fastening requirements.

Typical Spacing:

- 6 - 8' O.C.

-using **Mounting Clips** and **Isolation Washers**

-See **Appendix Tables 3-8** for project specific spacing.

Mounting Clips and Isolation Washers are included in the order for 6' spacings. Add more to the order if required for shorter spacings.

Fastener types

RECOMMENDED

Pan-Head Rounded-Head Self-Drilling Flanged Hex Head



*Length, thread and point to suit substrate and material surface.

Fasteners:

See fastener sizes below (By others)


Layout and predrill the back "L" at all fastener locations.

Refer to **Preparation drilling for Install** for hole dimensions and further details.


⚠ See Appendix for fastener specs:

Allowable Span - Tables 3-8


| Fastener Types/Sizes for L&L | | |
|------------------------------|----------|----------|
| L&L | Pan Head | Hex Head |
| 2" | #12 | #12 |
| 4" | #12 | #12 |
| 6" | #12 | #12 |
| 8" | #12 | #12 |
| 4"x4" | #12 | #12 |
| 4"x6" | #12 | #12 |
| 4" HD | #14 | #14 |
| 6" HD | #14 | #14 |
| 8" HD | #14 | #14 |

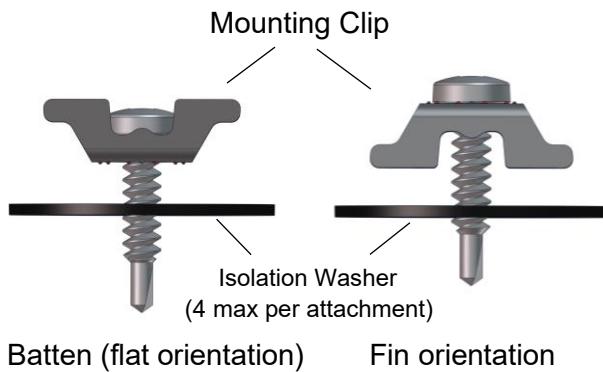

DO NOT USE

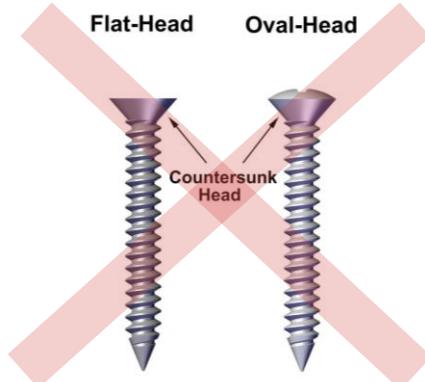

| Fastener Types/Sizes for End Mounts | | |
|-------------------------------------|----------|----------|
| End Mount | Pan Head | Hex Head |
| 2" | #10 | X |
| 4" | #12 | #12 |
| 6" | #12 | #12 |
| 8" | #12 | #12 |
| 4" HD | #14 | #14 |
| 6" HD | #14 | #14 |
| 8" HD | #14 | #14 |

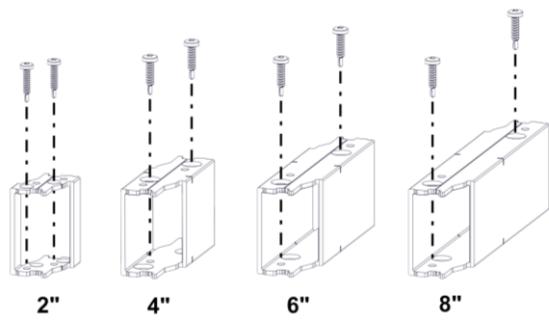

Framing/Furring requirements

Always consult your local building authority and follow local building code requirements.

See Typical dimensions for sizes and weights of the L&L system.

See Appendix for framing/furring/sheathing specs: Tables 3-8

System Install


Install details

Typical dimensions

- Longboard Link & Lock system typical dimensions:

| L&L | Width | Depth | Length | Weight(lbs/LF) *per set |
|--------------|--------------|-----------------|---------|-------------------------|
| 2" | 2" (50.8mm) | 1 5/8" (41.3mm) | 12'/24' | 0.93 |
| 4" | 4" (101.6mm) | 1 5/8" (41.3mm) | 12'24' | 1.3 |
| 6" | 6" (152.4mm) | 1 5/8" (41.3mm) | 12'24' | 1.6 |
| 8" | 8" (203mm) | 1 5/8" (41.3mm) | 12'24' | 1.9 |
| 4"x4" | 4" (101.6mm) | 4" (101.6mm) | 12'24' | 1.8 |
| 4"x6" | 6" (152.4mm) | 4" (101.6mm) | 12'24' | 2.1 |
| 4" HD | 4" (101.6mm) | 2" (50.8mm) | 12'24' | 1.7 |
| 6" HD | 6" (152.4mm) | 2" (50.8mm) | 12'24' | 2.4 |
| 8" HD | 8" (203mm) | 2" (50.8mm) | 12'24' | 3 |



- It is good practice to leave a 1/4" (6mm) gap between every component joint or 24' (7.3m) to allow for expansion & contraction. Consider the joints where components meet each other to dictate which component is installed first (eg: right angle butt joints, mitered joints etc.).
- Mounting Clips and Isolation Washers allow for movement of the battens, to expand & contract during thermal changes.
- Fasten Mounting Clips every 6-8' typical (based on load requirements), alternating from top to bottom for battens using die lines for guides.

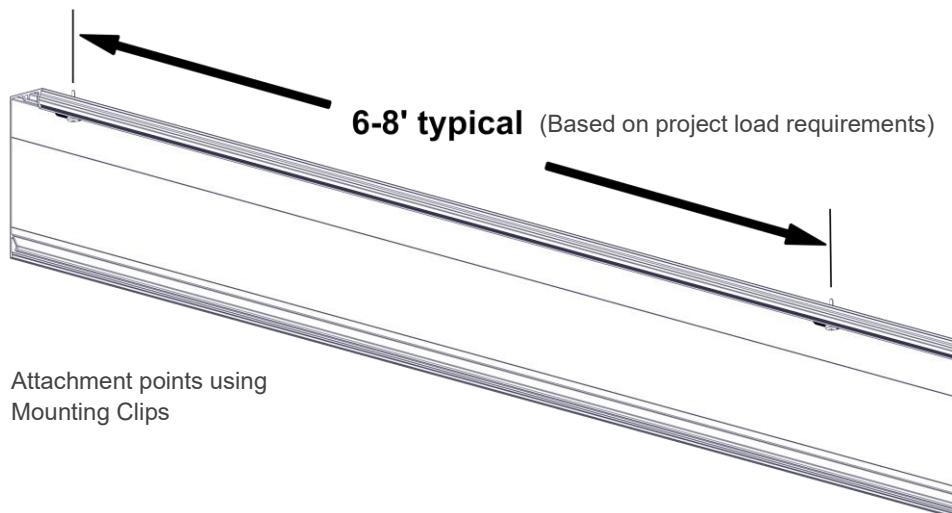

System layout and Install steps

Perimeter and field area limitations

Measure and layout your wall area to consider Link & Lock alignment with fixtures, penetrations, and adjacent walls, for desired appearance.

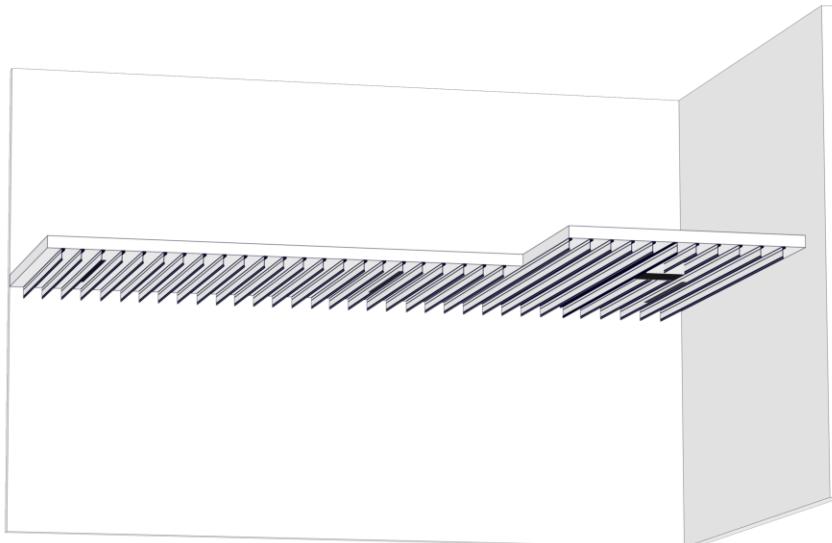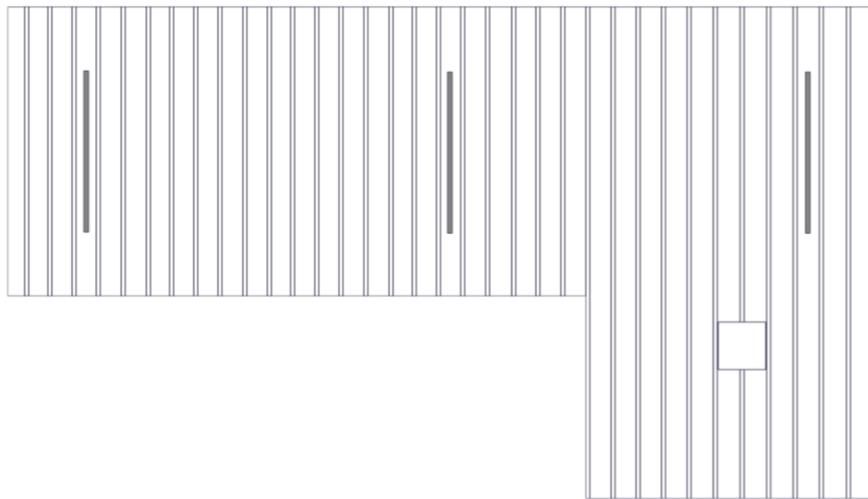

Link & Lock can cantilever half the allowable attachment span up to a **maximum of 3'** for all sizes and orientation.
See Appendix for allowable attachment span: **Tables 3-8**

Preparation drilling for Install

To prepare Link & Lock for install, layout and predrill the back "L" with 1/2" holes every 6-8' O.C. typical, with the first hole 2" in from the end to allow space for the End Cap.




For the Batten orientation, alternate the holes from top to bottom using the Dielines for guides.

For Fin orientation, use Pilot Point Drill Bit (see below) as recommended for ease of drilling.

Note: To hard fasten 1 location per length, omit the drilled hole at that location and use for hard fastening.


See **Appendix** for project specific fastener spacing:

Allowable Span - Tables 3-8

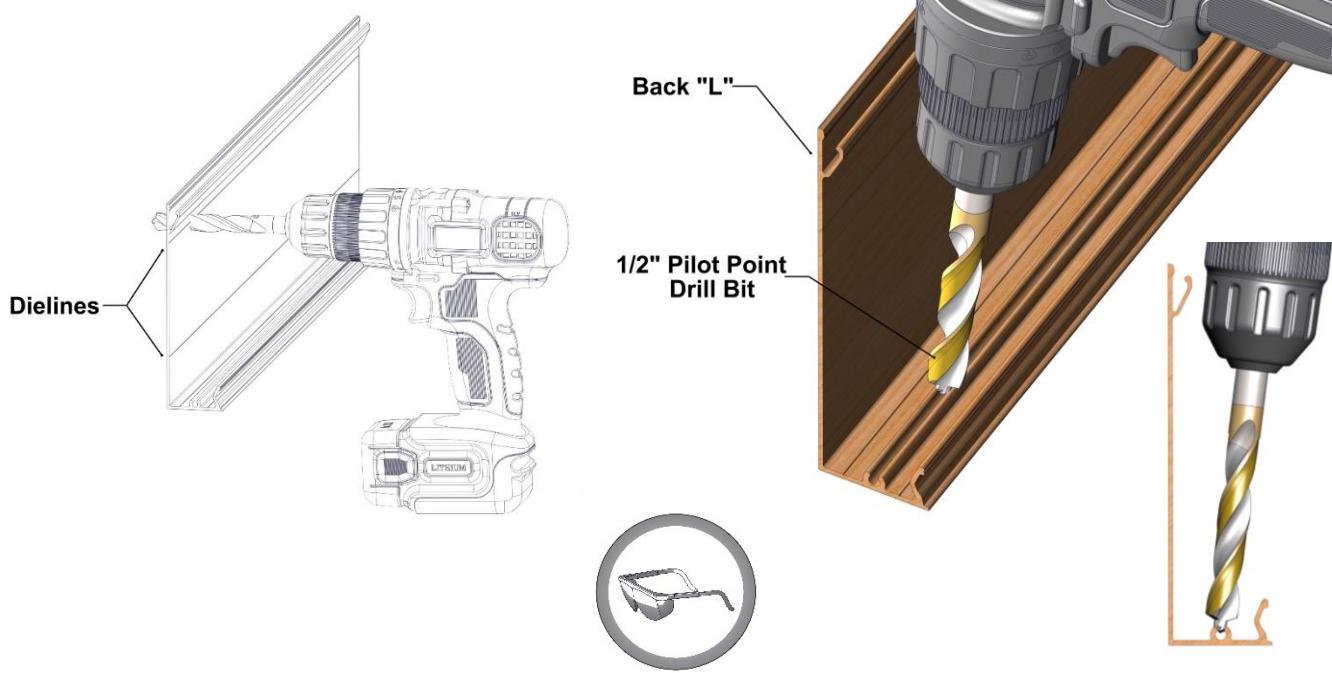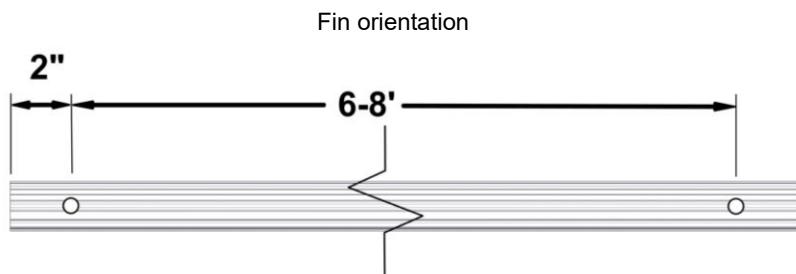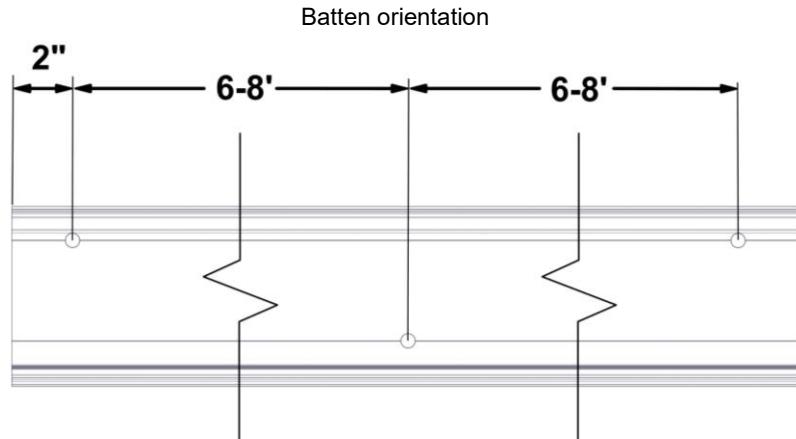


Butt-Joints & Lap Joints

- **▲ BUTT-JOINTS.** When installing butt-joints, ensure to leave a 1/4" (6mm) min. gap. every 24' (7.3m) min. **(See Detail A).** Fasteners should be anchored into a solid secure framing member, blocking, furring strip, or backer plate, etc.
- **▲ LAP-JOINTS.** When installing lap-joints, ensure to leave a 1/4" (6mm) min. gap. every 24' (7.3m) min. **(See Detail B).** Fasteners should be anchored into a solid secure framing member, blocking, furring strip, or backer plate, etc.
- Use touch-up paint pens (purchased separately) to finish the ends at the butt-joint or lap-joint.
- It is good practice to hard-fasten each back "L" at one point per length typically near the center, to keep the battens from migrating.
- DO NOT hard-fasten more than one (1) location per batten.


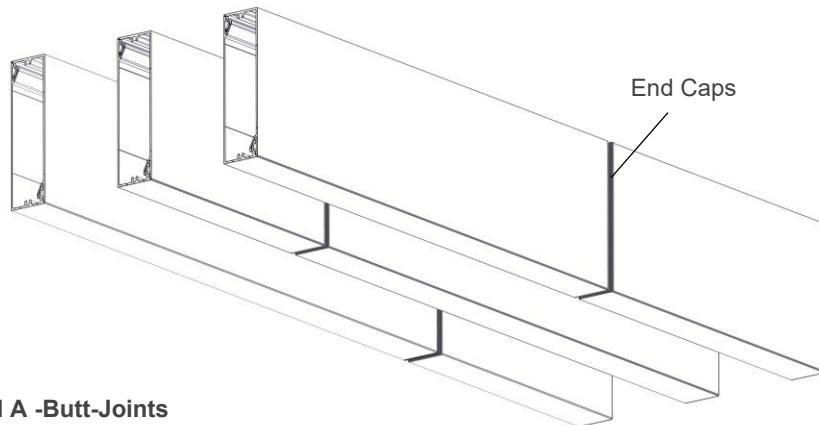


Detail A -Butt-Joints

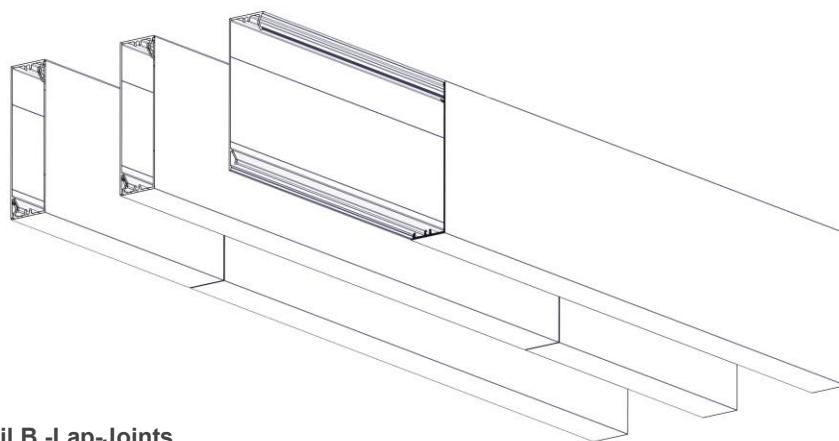

Detail B -Lap-Joints

Install Batten orientation

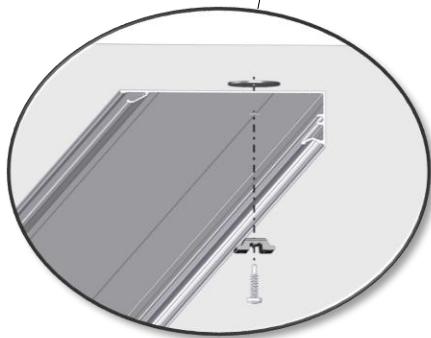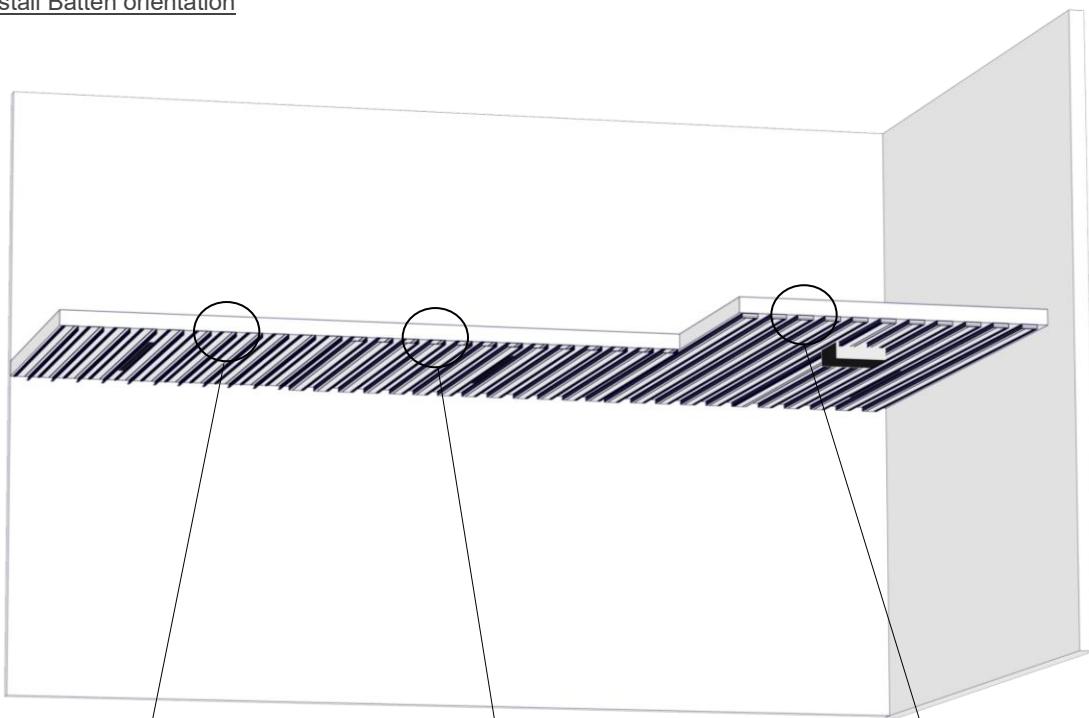


Step 1
Install back "L" using #12 Fasteners (#14 for L&L HD), Mounting Clips and Isolation Washers every 6-8' O.C. typical. Isolation Washers are installed between the L&L and the substrate (4 max per attachment).


Note: Be sure to fasten in the center of the 1/2" holes to allow for movement each way. Hard fasten near the center of each length to prevent migration of the material over time.




Cut off Taped/Drilled L&L ends (1/2" each end).

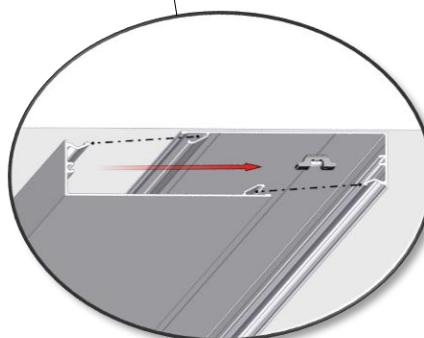

Step 2
Install front "L" and snap it into place, aligning it with ends and joints. If necessary, use a rubber mallet or hammer and block to protect the finish.

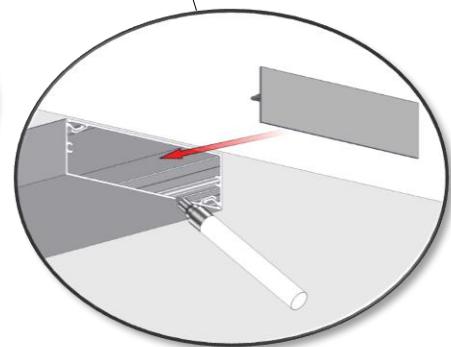


Step 3
Install End Caps, which are friction fit, by pressing them into place using the palm of your hand. If necessary, use a rubber mallet to snap them into place. If required, touch up the cut ends with matching paint pen.

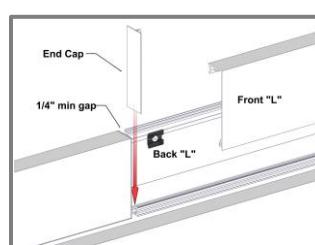

Install End Cap first in tight spaces.

Install Fin orientation

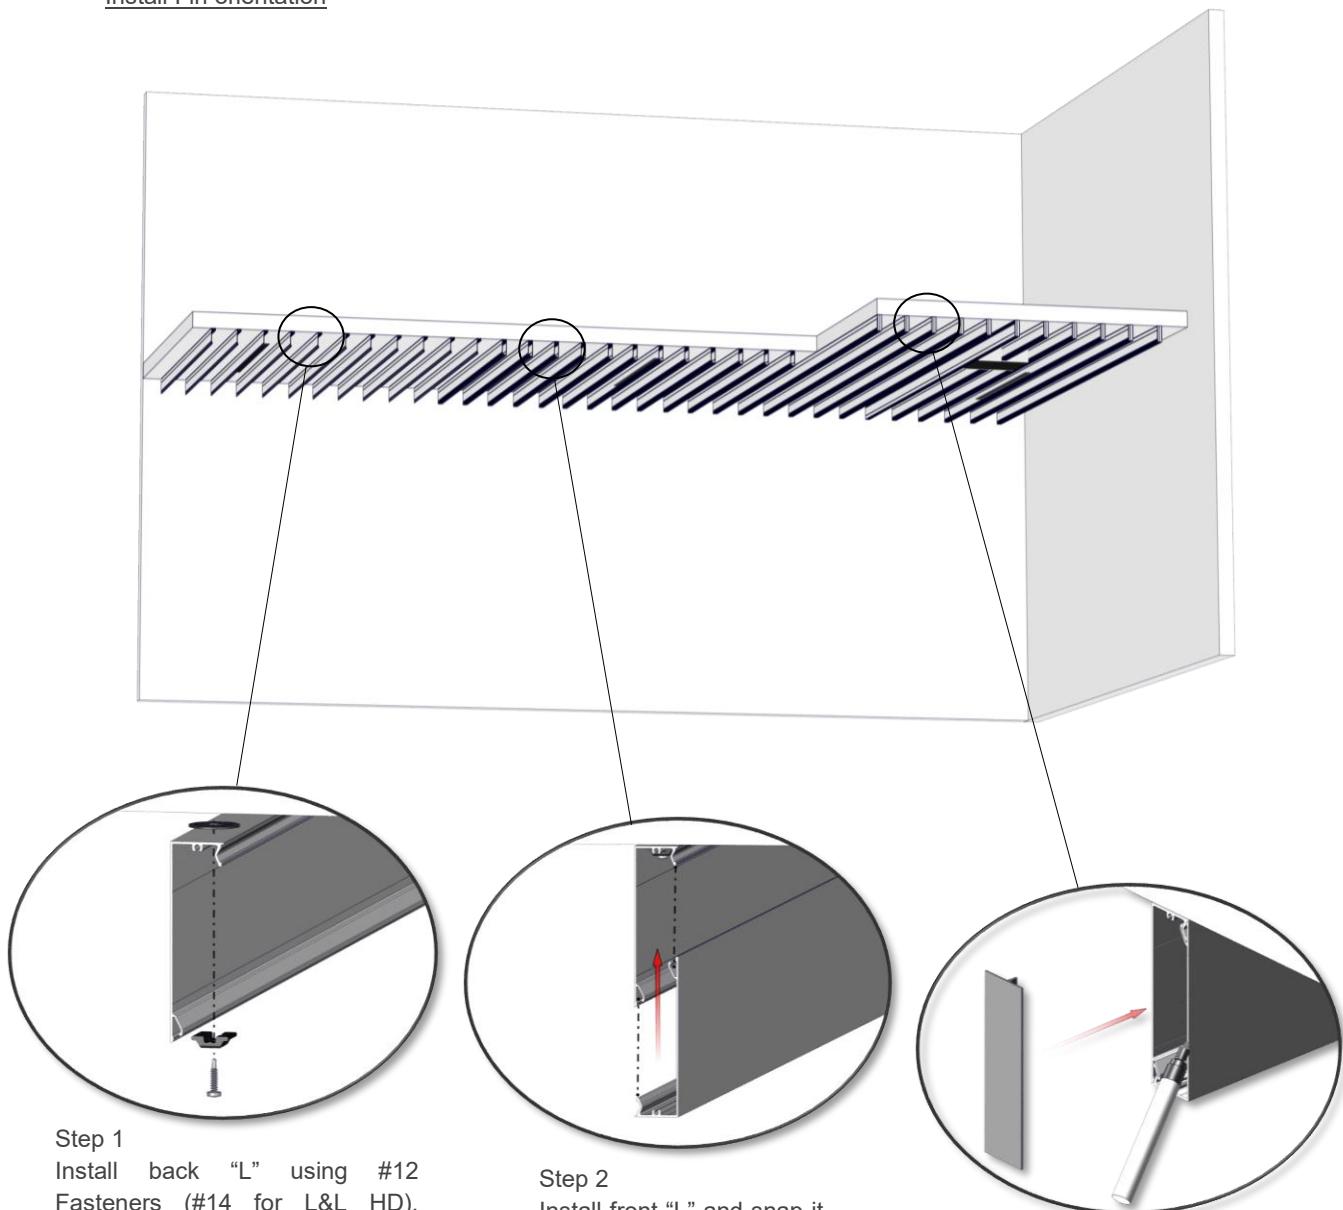

Step 1

Install back "L" using #12 Fasteners (#14 for L&L HD), Mounting Clips and Isolation Washers every 6-8' O.C. typical. Isolation Washers are installed between the L&L and the substrate (4 max per attachment).


Note: Be sure to fasten in the center of the 1/2" holes to allow for movement each way. Hard fasten near the center of each length to prevent migration of the material over time.



Cut off Taped/Drilled L&L ends (1/2" each end).

Step 2

Install front "L" and snap it into place, aligning it with ends and joints. If necessary, use a rubber mallet or hammer and block to protect the finish.

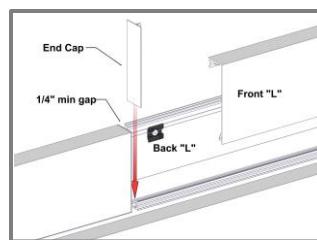

Install End Cap first in tight spaces.

Step 3

Install End Caps, which are friction fit, by pressing them into place using the palm of your hand. If necessary, use a rubber mallet to snap them into place. If required, touch up the cut ends with matching paint pen.


Install End to End orientation

Note: Use Tables 3-8 in Appendix for Allowable Span.

Step 1

Place End Mounts into position at the top and bottom of the install. It is good practice to check your installation every 2-3 rows for level/plumb and flat/straight, for best results.



| Fastener Types/Sizes for End Mounts | | |
|-------------------------------------|----------|----------------|
| End Mount | Pan Head | Hex Head |
| 2" | #10 | #12 |
| 4" | #12 | #12 |
| 6" | #12 | #12 |
| 8" | #12 | #12 |
| 4" HD | #14 | #14 |
| 6" HD | #14 | #14 |
| 8" HD | #14 | #14 |

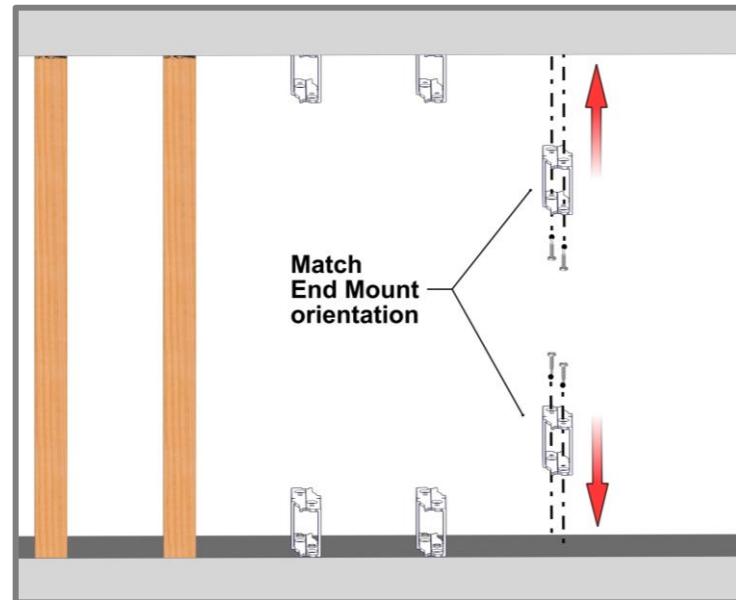

Step 2

Install the End Mounts using #12 Fasteners (#10 for 2" End Mount). Make sure to match the orientation of the End Mounts so the Link & Lock set matches on the top and the bottom. See above for **Fastener Types for End Mounts**.

⚠ TIP: Check the position of the End Mounts once installed to allow a plumb and straight look.

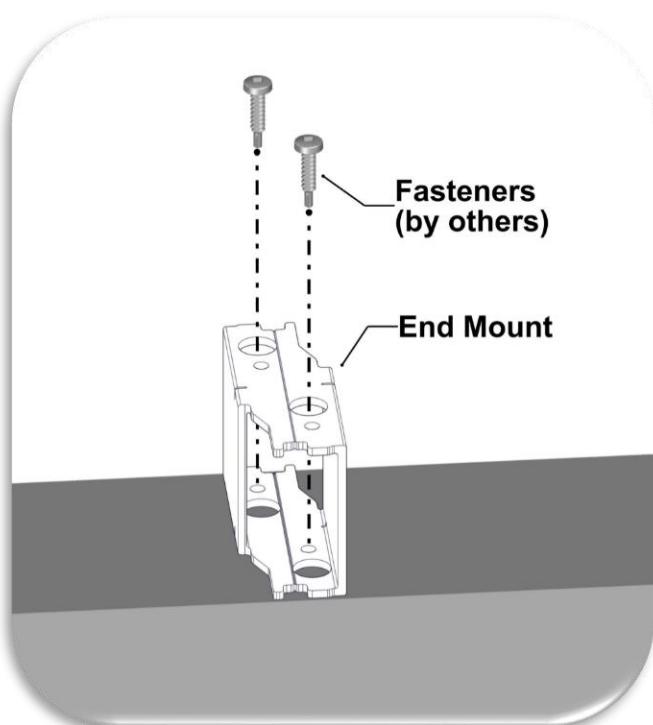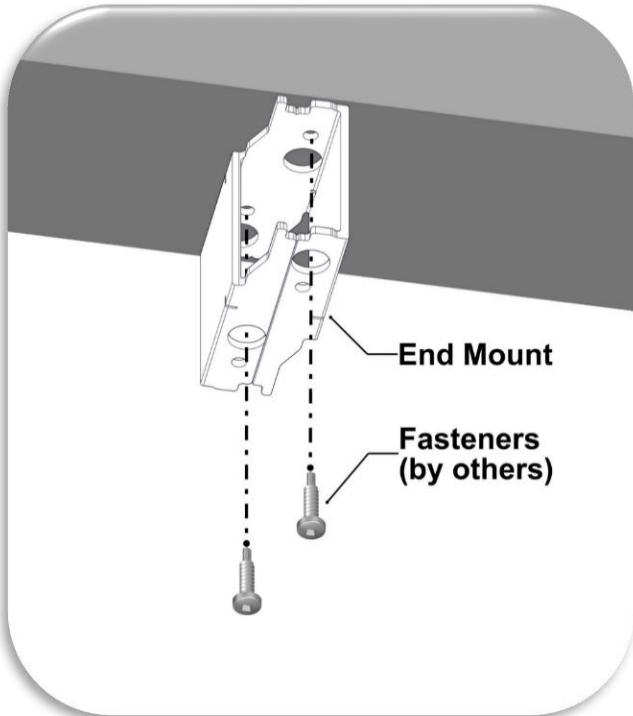


Step 3



Measure, cut and install Link & Lock Set and snap it into place onto the End Mounts. Use clamps with rubber pads as common practice to securely snap the front "L" onto the back "L".

If necessary, use a rubber mallet or hammer and block to protect the finish.

⚠️ TIP: When measuring the Link & Lock, make sure to leave a gap (~1/4") for expansion and building movement.

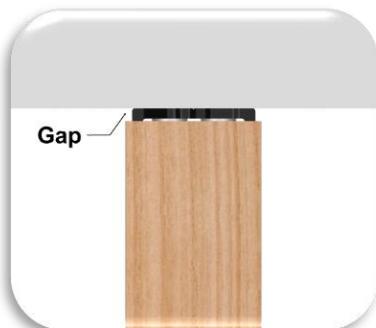

Cut off Taped/Drilled L&L ends (1/2" each end).

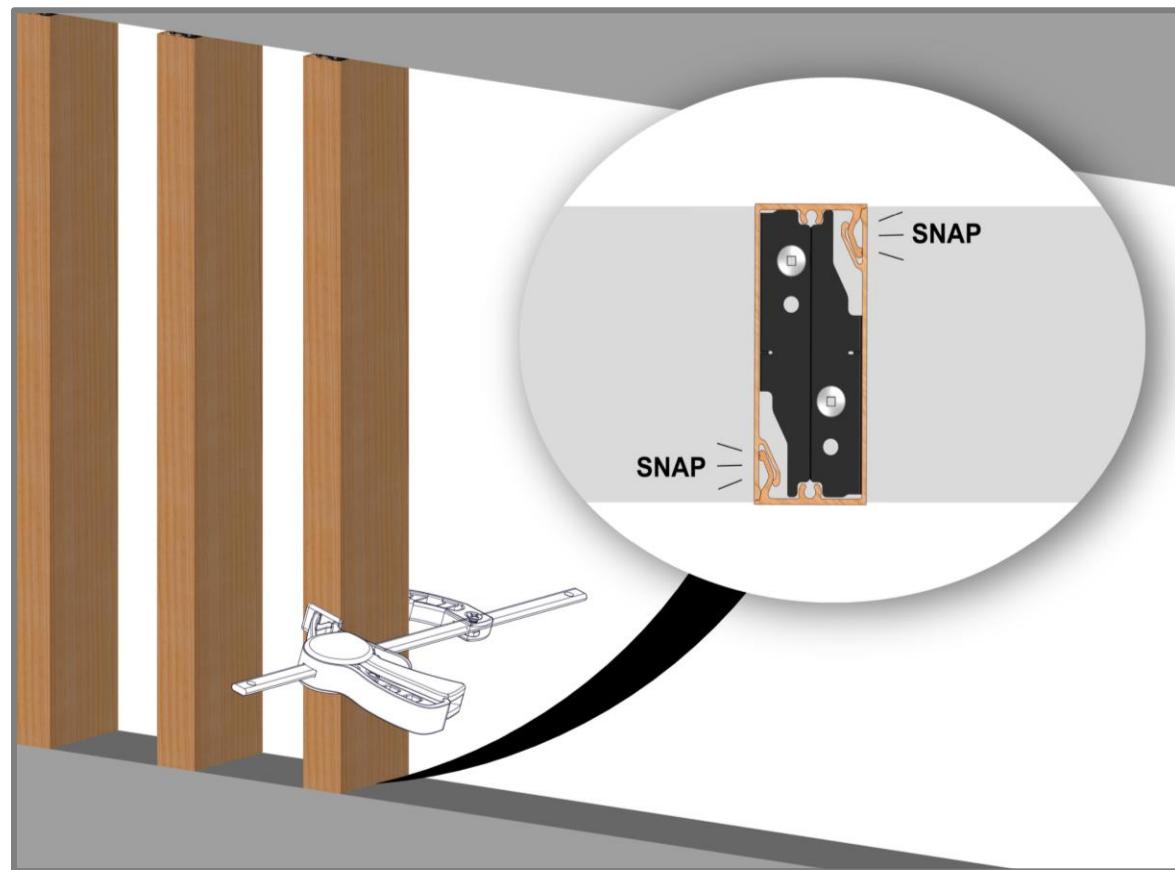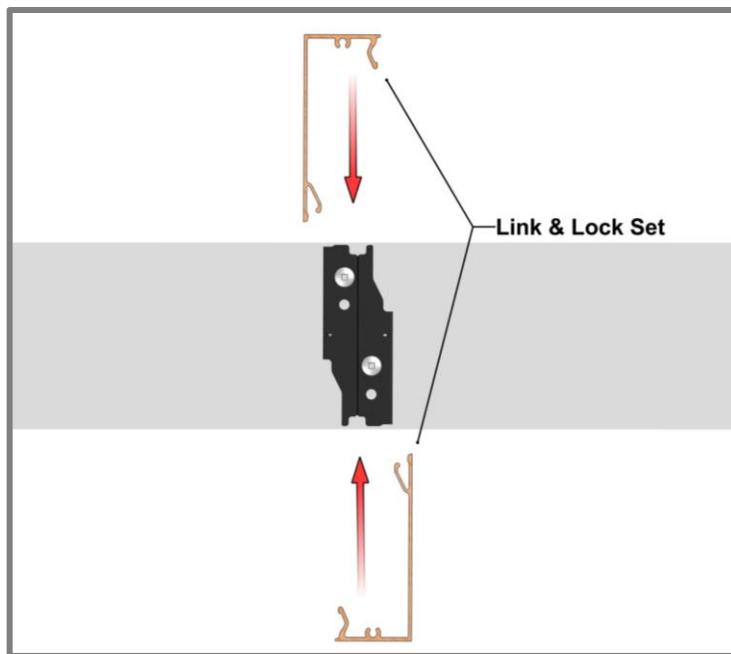


Link & Lock HD

- Used for greater spans compared to standard Link & Lock
- Available sizes: 4", 6" & 8" (2" depth)
- Uses standard Mounting Clip, Isolation Washer and attachment methods
- Use #14 Fasteners

Refer to System Layout and Install steps section for typical install details.


To Compare allowable spans:
See **Appendix for allowable spans for project specific wind load.**
Allowable Span – Tables 4-6

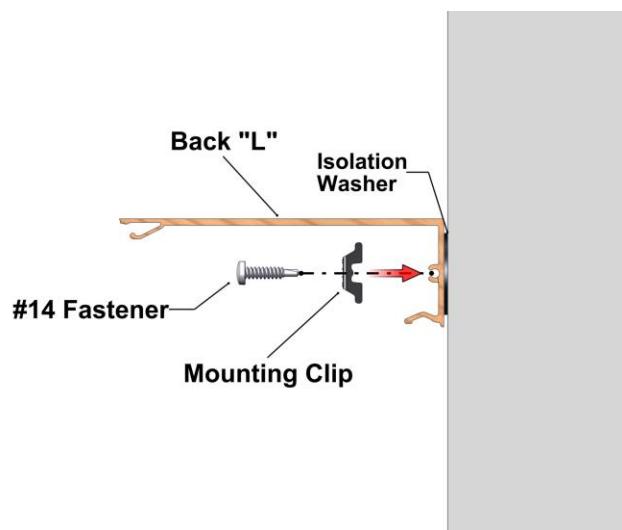

6" L&L
6' span max
@30PSF

6" L&L HD
12' span max
@30PSF

Profile Comparison

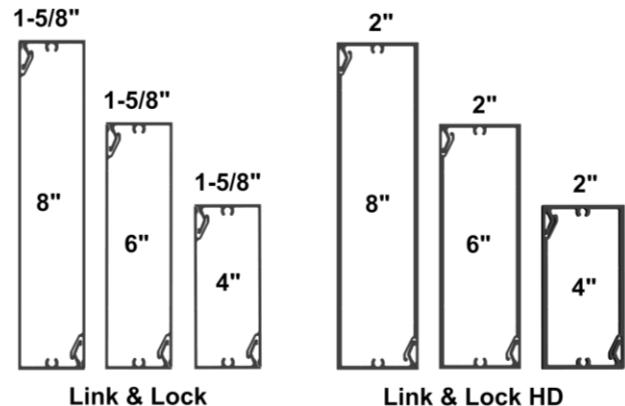

4x4 & 4x6 Link & Lock



- Available sizes: 4"x4" & 4"x6"
- Uses standard Mounting Clip and attachment methods with #12 Fasteners



Refer to System Layout and Install steps section for typical install details.

See Appendix for allowable spans for project specific load.

Allowable Span – Tables 7 & 8

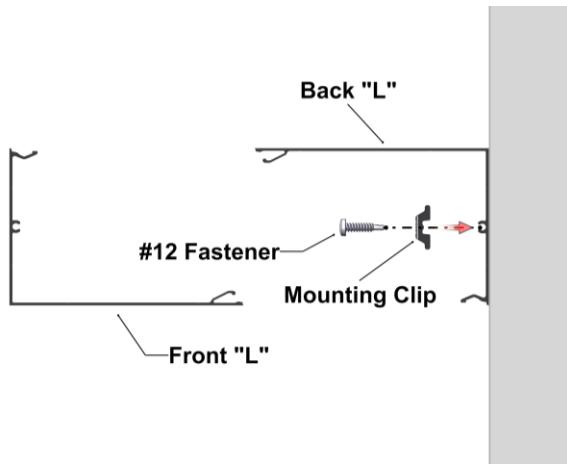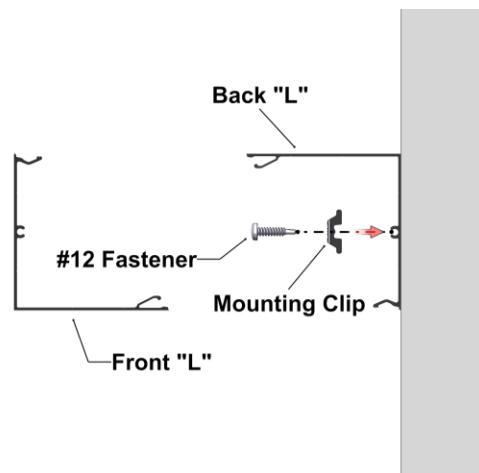

Appendix

Expansion and Contraction Tables

TABLE 1 - IMPERIAL

AVERAGE TEMPERATURE AT TIME OF CUTTING & INSTALLATION

| °C | -50 | -40 | -30 | -20 | -10 | 0 | 10 | 20 | 30 | 40 | 50 |
|--------------------------------------|-----|-----|-----|-----|-------|--------|--------|--------|--------|--------|--------|
| °F | -58 | -40 | -22 | -4 | 14 | 32 | 50 | 68 | 86 | 104 | 122 |
| EXPANSION OR CONTRACTION (INCH/FOOT) | | | | | | | | | | | |
| -50 | -58 | | | | 0.000 | -0.003 | -0.005 | -0.008 | -0.011 | -0.014 | -0.016 |
| -40 | -40 | | | | 0.003 | 0.000 | -0.003 | -0.005 | -0.008 | -0.011 | -0.014 |
| -30 | -22 | | | | 0.005 | 0.003 | 0.000 | -0.003 | -0.005 | -0.008 | -0.011 |
| -20 | -4 | | | | 0.008 | 0.005 | 0.003 | 0.000 | -0.003 | -0.005 | -0.008 |
| -10 | 14 | | | | 0.011 | 0.008 | 0.005 | 0.003 | 0.000 | -0.003 | -0.005 |
| 0 | 32 | | | | 0.014 | 0.011 | 0.008 | 0.005 | 0.003 | -0.005 | -0.008 |
| 10 | 50 | | | | 0.016 | 0.014 | 0.011 | 0.008 | 0.005 | 0.003 | 0.000 |
| 20 | 68 | | | | 0.019 | 0.016 | 0.014 | 0.011 | 0.008 | 0.005 | -0.003 |
| 30 | 86 | | | | 0.022 | 0.019 | 0.016 | 0.014 | 0.011 | 0.008 | 0.005 |
| 40 | 104 | | | | 0.024 | 0.022 | 0.019 | 0.016 | 0.014 | 0.011 | 0.008 |
| 50 | 122 | | | | 0.027 | 0.024 | 0.022 | 0.019 | 0.016 | 0.014 | 0.011 |

TABLE 2 - METRIC

AVERAGE TEMPERATURE AT TIME OF CUTTING & INSTALLATION

| °C | -50 | -40 | -30 | -20 | -10 | 0 | 10 | 20 | 30 | 40 | 50 |
|-------------------------------------|-----|-----|-----|-----|-------|--------|--------|--------|--------|--------|--------|
| °F | -58 | -40 | -22 | -4 | 14 | 32 | 50 | 68 | 86 | 104 | 122 |
| EXPANSION OR CONTRACTION (MM/METER) | | | | | | | | | | | |
| -50 | -58 | | | | 0.000 | -0.230 | -0.460 | -0.690 | -0.920 | -1.150 | -1.380 |
| -40 | -40 | | | | 0.230 | 0.000 | -0.230 | -0.460 | -0.690 | -0.920 | -1.150 |
| -30 | -22 | | | | 0.460 | 0.230 | 0.000 | -0.230 | -0.460 | -0.690 | -0.920 |
| -20 | -4 | | | | 0.690 | 0.460 | 0.230 | 0.000 | -0.230 | -0.460 | -0.690 |
| -10 | 14 | | | | 0.920 | 0.690 | 0.460 | 0.230 | 0.000 | -0.230 | -0.460 |
| 0 | 32 | | | | 1.150 | 0.920 | 0.690 | 0.460 | 0.230 | 0.000 | -0.230 |
| 10 | 50 | | | | 1.380 | 1.150 | 0.920 | 0.690 | 0.460 | 0.230 | 0.000 |
| 20 | 68 | | | | 1.610 | 1.380 | 1.150 | 0.920 | 0.690 | 0.460 | 0.230 |
| 30 | 86 | | | | 1.840 | 1.610 | 1.380 | 1.150 | 0.920 | 0.690 | 0.460 |
| 40 | 104 | | | | 2.070 | 1.840 | 1.610 | 1.380 | 1.150 | 0.920 | 0.690 |
| 50 | 122 | | | | 2.300 | 2.070 | 1.840 | 1.610 | 1.380 | 1.150 | 0.920 |

TABLE 3

| 2" LINK & LOCK™ INTREPID | | FASTENER SPACING - LOAD TABLE | | | | | | | | | | |
|--------------------------|-----|-------------------------------|----|----|----|----|----|----|----|-----|-----|-----|
| | | PSF (Factored / Ultimate) | | | | | | | | | | |
| Standard | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 | 90 | 100 | 110 | 120 |
| ALLOWABLE SPAN (FT)* | 6' | | | | | | | | | | | |
| | 8' | | | | | | | | | | | |
| | 10' | | | | | | | | | | | |
| | 12' | | | | | | | | | | | |

*CANTILEVERS are not to exceed half (1/2) the allowable span to a maximum of 3'

Calculations are using L/180 deflection limits

| SUBSTRATE TYPE | SUBSTRATE REQUIREMENTS | ANCHOR DESCRIPTION | MIN. EMBEDMENT | MIN. EDGE DISTANCE |
|-------------------------|---|---|--|--------------------|
| WOOD | Min. specific gravity = 0.55 wood | #12 Pan Head Wood Screw | 1-1/2" | 1" |
| STEEL | Min. 18 ga., Min. Fy=33 ksi. | #12 Self-Drilling or Self-Tapping Screw (Grade 5) | 3 threads penetration past metal structure | 1/2" |
| ALUMINUM | Min. 1/8", Min. 6063-T5 | | | |
| CONCRETE | Min. 3000 psi | | 1-1/2" | 1-3/4" |
| HOLLOW/GROUT-FILLED CMU | Conforms to ASTM C-90, with Min. compressive strength of 2000 psi | 3/16" ITW Tapcon | 1" | 2" |

GENERAL NOTES:

1. This product has been designed and manufactured to comply with the current Florida Building Code (FBC), **INCLUDING HVHZ** and has been evaluated according to the following:
 - Section 1709.8
 - ASTM E8-16
2. Adequacy of the structural concrete/masonry and 2X framing as a main wind force resisting system capable of withstanding and transferring applied product loads to the foundation is the responsibility of the engineer or architect of record for the project of installation.
3. Substrate shall be designed and anchored to properly transfer all loads to the structure. Buck design and installation is the responsibility of the engineer or architect of record for the project of installation.
4. The installation details described herein are generic and may not reflect actual conditions for a specific site. If site conditions cause installation to deviate from the requirements detailed herein, a licensed engineer or architect shall prepare site specific documents for use with this document.
5. Link & Lock is not designed to be a life-safety item. Designs of this nature are the responsibility of the engineer or architect of record.

INSTALLATION NOTES:

1. One (1) installation anchor is required at each location. Minimum of two (2) anchors per batten.
2. Spacing is from fastener center to center.
3. The number of installation anchors per the table is the minimum number of anchors to be used for product installation.
4. Install individual installation anchors within a tolerance of +/- 1/2" of the specified spacings. Tolerances are not cumulative from one installation anchor to the next.
5. Minimum embedment and edge distance exclude wall finishes, including but not limited to stucco, foam, brick veneer, sheathing and siding.
6. Installation anchors and associated hardware must be made of corrosion resistant material or have a corrosion resistant coating. Common fastener types can be equal or better to a & b listed below:
 - Zinc plated fasteners for moderate climate zones
 - 316 Stainless Steel fasteners for coastal climate zones
7. For hollow block and grout filled CMU block, do not install installation anchors into mortar joints. Edge distance is measured from free edge of block or edge of mortar joint into face shell of block.
8. Installation anchors shall be installed in accordance with anchor manufacturer's installation instructions, and anchors shall not be used in substrates with strengths less than the minimum strength specified by the anchor manufacturer.
9. When using end mounts, span distance is measured center to center of each end mount.

TABLE 4

| 4" LINK & LOCK™ INTREPID | | | FASTENER SPACING - LOAD TABLE | | | | | | | | | | | |
|--------------------------|-----------------------|----|-------------------------------|-----------------------|-----------------------|-----------------------|----|-----------------------|----|----|----|-----|-----|-----|
| Standard | Standard w. Stiffener | HD | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 | 90 | 100 | 110 | 120 |
| ALLOWABLE SPAN (FT)* | | | 6' | | | | | Standard w. Stiffener | | HD | | | | |
| | | | 8' | | | Standard w. Stiffener | | HD | | | | | | |
| | | | 10' | | Standard w. Stiffener | | HD | | | | | | | |
| | | | 12' | Standard w. Stiffener | | HD | | | | | | | | |
| | | | 14' | HD | | | | | | | | | | |
| | | | 16' | HD | | | | | | | | | | |

*CANTILEVERS are not to exceed half (1/2) the allowable span to a maximum of 3'

Calculations are using L/180 deflection limits

| SUBSTRATE TYPE | SUBSTRATE REQUIREMENTS | ANCHOR DESCRIPTION | MIN. EMBEDMENT | MIN. EDGE DISTANCE |
|-------------------------|---|---|--|--------------------|
| WOOD | Min. specific gravity = 0.55 wood | #12 Pan Head Wood Screw | 1-1/2" | 1" |
| STEEL | Min. 18 ga., Min. Fy=33 ksi. | #12 Self-Drilling or Self-Tapping Screw (Grade 5) | 3 threads penetration past metal structure | 1/2" |
| ALUMINUM | Min. 1/8", Min. 6063-T5 | | | |
| CONCRETE | Min. 3000 psi | 3/16" ITW Tapcon | 1-1/2" | 1-3/4" |
| HOLLOW/GROUT-FILLED CMU | Conforms to ASTM C-90, with Min. compressive strength of 2000 psi | | 1" | 2" |

GENERAL NOTES:

1. This product has been designed and manufactured to comply with the current Florida Building Code (FBC), **INCLUDING** HVHZ and has been evaluated according to the following:
 - Section 1709.8
 - ASTM E8-16
2. Adequacy of the structural concrete/masonry and 2X framing as a main wind force resisting system capable of withstanding and transferring applied product loads to the foundation is the responsibility of the engineer or architect of record for the project of installation.
3. Substrate shall be designed and anchored to properly transfer all loads to the structure. Buck design and installation is the responsibility of the engineer or architect of record for the project of installation.
4. The installation details described herein are generic and may not reflect actual conditions for a specific site. If site conditions cause installation to deviate from the requirements detailed herein, a licensed engineer or architect shall prepare site specific documents for use with this document.
5. Link & Lock is not designed to be a life-safety item. Designs of this nature are the responsibility of the engineer or architect of record.

INSTALLATION NOTES:

1. One (1) installation anchor is required at each location. Minimum of two (2) anchors per batten.
2. Spacing is from fastener center to center.
3. The number of installation anchors per the table is the minimum number of anchors to be used for product installation.
4. Install individual installation anchors within a tolerance of +/- 1/2" of the specified spacings. Tolerances are not cumulative from one installation anchor to the next.
5. Minimum embedment and edge distance exclude wall finishes, including but not limited to stucco, foam, brick veneer, sheathing and siding.
6. Installation anchors and associated hardware must be made of corrosion resistant material or have a corrosion resistant coating. Common fastener types can be equal or better to a & b listed below:
 - Zinc plated fasteners for moderate climate zones
 - .316 Stainless Steel fasteners for coastal climate zones
7. For hollow block and grout filled CMU block, do not install installation anchors into mortar joints. Edge distance is measured from free edge of block or edge of mortar joint into face shell of block.
8. Installation anchors shall be installed in accordance with anchor manufacturer's installation instructions, and anchors shall not be used in substrates with strengths less than the minimum strength specified by the anchor manufacturer.
9. When using end mounts, span distance is measured center to center of each end mount.

TABLE 5

| 6" LINK & LOCK™ INTREPID | | | FASTENER SPACING - LOAD TABLE | | | | | | | | | | | |
|--------------------------|-----------------------|----|-------------------------------|-----------------------|-----------------------|----|----|-----------------------|----|----|----|-----|-----|-----|
| Standard | Standard w. Stiffener | HD | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 | 90 | 100 | 110 | 120 |
| ALLOWABLE SPAN (FT)* | | | 6' | | | | | Standard w. Stiffener | HD | | | | | |
| | | | 8' | | Standard w. Stiffener | | HD | | | | | | | |
| | | | 10' | | Standard w. Stiffener | HD | | | | | | | | |
| | | | 12' | Standard w. Stiffener | HD | | | | | | | | | |
| | | | 14' | HD | | | | | | | | | | |
| | | | 16' | HD | | | | | | | | | | |

*CANTILEVERS are not to exceed half (1/2) the allowable span to a maximum of 3'

Calculations are using L/180 deflection limits

| SUBSTRATE TYPE | SUBSTRATE REQUIREMENTS | ANCHOR DESCRIPTION | MIN. EMBEDMENT | MIN. EDGE DISTANCE |
|-------------------------|---|---|--|--------------------|
| WOOD | Min. specific gravity = 0.55 wood | #12 Pan Head Wood Screw | 1-1/2" | 1" |
| STEEL | Min. 18 ga., Min. Fy=33 ksi. | #12 Self-Drilling or Self-Tapping Screw (Grade 5) | 3 threads penetration past metal structure | 1/2" |
| ALUMINUM | Min. 1/8", Min. 6063-T5 | | | |
| CONCRETE | Min. 3000 psi | 3/16" ITW Tapcon | 1-1/2" | 1-3/4" |
| HOLLOW/GROUT-FILLED CMU | Conforms to ASTM C-90, with Min. compressive strength of 2000 psi | | 1" | 2" |

GENERAL NOTES:

- This product has been designed and manufactured to comply with the current Florida Building Code (FBC), **INCLUDING** HVHZ and has been evaluated according to the following:
 - Section 1709.8
 - ASTM E8-16
- Adequacy of the structural concrete/masonry and 2X framing as a main wind force resisting system capable of withstanding and transferring applied product loads to the foundation is the responsibility of the engineer or architect of record for the project of installation.
- Substrate shall be designed and anchored to properly transfer all loads to the structure. Buck design and installation is the responsibility of the engineer or architect of record for the project of installation.
- The installation details described herein are generic and may not reflect actual conditions for a specific site. If site conditions cause installation to deviate from the requirements detailed herein, a licensed engineer or architect shall prepare site specific documents for use with this document.
- Link & Lock is not designed to be a life-safety item. Designs of this nature are the responsibility of the engineer or architect of record.

INSTALLATION NOTES:

- One (1) installation anchor is required at each location. Minimum of two (2) anchors per batten.
- Spacing is from fastener center to center.
- The number of installation anchors per the table is the minimum number of anchors to be used for product installation.
- Install individual installation anchors within a tolerance of +/- 1/2" of the specified spacings. Tolerances are not cumulative from one installation anchor to the next.
- Minimum embedment and edge distance exclude wall finishes, including but not limited to stucco, foam, brick veneer, sheathing and siding.
- Installation anchors and associated hardware must be made of corrosion resistant material or have a corrosion resistant coating. Common fastener types can be equal or better to a & b listed below:
 - Zinc plated fasteners for moderate climate zones
 - 316 Stainless Steel fasteners for coastal climate zones
- For hollow block and grout filled CMU block, do not install installation anchors into mortar joints. Edge distance is measured from free edge of block or edge of mortar joint into face shell of block.
- Installation anchors shall be installed in accordance with anchor manufacturer's installation instructions, and anchors shall not be used in substrates with strengths less than the minimum strength specified by the anchor manufacturer.
- When using end mounts, span distance is measured center to center of each end mount.

TABLE 6

| 8" LINK & LOCK™ INTREPID | | | FASTENER SPACING - LOAD TABLE | | | | | | | | | | | |
|--------------------------|-----------------------|-----------------------|-------------------------------|-----------------------|----|----|-----------------------|----|----|----|----|-----|-----|-----|
| Standard | Standard w. Stiffener | HD | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 | 90 | 100 | 110 | 120 |
| ALLOWABLE SPAN (FT)* | 6' | | | | | | Standard w. Stiffener | HD | | | | | | |
| | 8' | | | Standard w. Stiffener | HD | | | | | | | | | |
| | 10' | Standard w. Stiffener | HD | | | | | | | | | | | |
| | 12' | HD | | | | | | | | | | | | |
| | 14' | HD | | | | | | | | | | | | |

*CANTILEVERS are not to exceed half (1/2) the allowable span to a maximum of 3'.

Calculations are using L/180 deflection limits

| SUBSTRATE TYPE | SUBSTRATE REQUIREMENTS | ANCHOR DESCRIPTION | MIN. EMBEDMENT | MIN. EDGE DISTANCE |
|-------------------------|---|---|--|--------------------|
| WOOD | Min. specific gravity = 0.55 wood | #12 Pan Head Wood Screw | 1-1/2" | 1" |
| STEEL | Min. 18 ga., Min. Fy=33 ksi. | #12 Self-Drilling or Self-Tapping Screw (Grade 5) | 3 threads penetration past metal structure | 1/2" |
| ALUMINUM | Min. 1/8", Min. 6063-T5 | | | |
| CONCRETE | Min. 3000 psi | 3/16" ITW Tapcon | 1-1/2" | 1-3/4" |
| HOLLOW/GROUT-FILLED CMU | Conforms to ASTM C-90, with Min. compressive strength of 2000 psi | | 1" | 2" |

GENERAL NOTES:

- This product has been designed and manufactured to comply with the current Florida Building Code (FBC), **INCLUDING** HVHZ and has been evaluated according to the following:
 - Section 1709.8
 - ASTM E8-16
- Adequacy of the structural concrete/masonry and 2X framing as a main wind force resisting system capable of withstanding and transferring applied product loads to the foundation is the responsibility of the engineer or architect of record for the project of installation.
- Substrate shall be designed and anchored to properly transfer all loads to the structure. Buck design and installation is the responsibility of the engineer or architect of record for the project of installation.
- The installation details described herein are generic and may not reflect actual conditions for a specific site. If site conditions cause installation to deviate from the requirements detailed herein, a licensed engineer or architect shall prepare site specific documents for use with this document.
- Link & Lock is not designed to be a life-safety item. Designs of this nature are the responsibility of the engineer or architect of record.

INSTALLATION NOTES:

- One (1) installation anchor is required at each location. Minimum of two (2) anchors per batten.
- Spacing is from fastener center to center.
- The number of installation anchors per the table is the minimum number of anchors to be used for product installation.
- Install individual installation anchors within a tolerance of +/- 1/2" of the specified spacings. Tolerances are not cumulative from one installation anchor to the next.
- Minimum embedment and edge distance exclude wall finishes, including but not limited to stucco, foam, brick veneer, sheathing and siding.
- Installation anchors and associated hardware must be made of corrosion resistant material or have a corrosion resistant coating. Common fastener types can be equal or better to a & b listed below:
 - Zinc plated fasteners for moderate climate zones
 - 316 Stainless Steel fasteners for coastal climate zones
- For hollow block and grout filled CMU block, do not install installation anchors into mortar joints. Edge distance is measured from free edge of block or edge of mortar joint into face shell of block.
- Installation anchors shall be installed in accordance with anchor manufacturer's installation instructions, and anchors shall not be used in substrates with strengths less than the minimum strength specified by the anchor manufacturer.
- When using end mounts, span distance is measured center to center of each end mount.

TABLE 7

| 4X4 LINK & LOCK™ | | FASTENER SPACING - LOAD TABLE | | | | | | | | | | |
|----------------------|-----|-------------------------------|----|----|----|----|----|----|----|-----|-----|-----|
| Standard | | 20 | 30 | 40 | 50 | 60 | 70 | 80 | 90 | 100 | 110 | 120 |
| ALLOWABLE SPAN (FT)* | 8' | | | | | | | | | | | |
| | 10' | | | | | | | | | | | |
| | 12' | | | | | | | | | | | |

*CANTILEVERS are not to exceed 3'

Calculations are using L/180 deflection limits

| SUBSTRATE TYPE | SUBSTRATE REQUIREMENTS | ANCHOR DESCRIPTION | MIN. EMBEDMENT | MIN. EDGE DISTANCE |
|-------------------------|---|---|--|--------------------|
| WOOD | Min. specific gravity = 0.55 wood | #12 Pan Head or Flanged Hex Head Wood Screw | 1-1/2" | 1" |
| STEEL | Min. 18 ga., Min. Fy=36 ksi. | #12 Self-Drilling or Self-Tapping Screw Pan Head or Flanged Hex Head Wood Screw (Grade 5) | 3 threads penetration past metal structure | 1/2" |
| ALUMINUM | Min. 1/8", Min. 8063-T5 | | | |
| CONCRETE | Min. 3000 psi | 3/16" ITW Tapcon | 1-1/2" | 1-3/4" |
| HOLLOW/GROUT-FILLED CMU | Conforms to ASTM C-90, with Min. compressive strength of 2000 psi | | 1" | 2" |

GENERAL NOTES:

1. Adequacy of the structural concrete/masonry and 2X framing as a main wind force resisting system capable of withstanding and transferring applied product loads to the foundation is the responsibility of the engineer or architect of record for the project of installation.
2. Substrate shall be designed and anchored to properly transfer all loads to the structure. Buck design and installation is the responsibility of the engineer or architect of record for the project of installation.
3. The installation details described herein are generic and may not reflect actual conditions for a specific site. If site conditions cause installation to deviate from the requirements detailed herein, a licensed engineer or architect shall prepare site specific documents for use with this document.
4. Link & Lock is not designed to be a life-safety item. Designs of this nature are the responsibility of the engineer or architect of record.

INSTALLATION NOTES:

1. One (1) installation anchor is required at each location. Minimum of two (2) anchors per batten.
2. Spacing is from fastener center to center.
3. The number of installation anchors per the table is the minimum number of anchors to be used for product installation.
4. Install individual installation anchors within a tolerance of +/- 1/2" of the specified spacings. Tolerances are not cumulative from one installation anchor to the next.
5. Minimum embedment and edge distance exclude wall finishes, including but not limited to stucco, foam, brick veneer, sheathing and siding.
6. Installation anchors and associated hardware must be made of corrosion resistant material or have a corrosion resistant coating. Common fastener types can be equal or better to a & b listed below:
 - a. Zinc plated fasteners for moderate climate zones
 - b. 316 Stainless Steel fasteners for coastal climate zones
7. For hollow block and grout filled CMU block, do not install installation anchors into mortar joints. Edge distance is measured from free edge of block or edge of mortar joint into face shell of block.
8. Installation anchors shall be installed in accordance with anchor manufacturer's installation instructions, and anchors shall not be used in substrates with strengths less than the minimum strength specified by the anchor manufacturer.

TABLE 8

| 4X6 LINK & LOCK™ | | FASTENER SPACING - LOAD TABLE | | | | | | | | | | |
|----------------------|-----------------------------------|-------------------------------|----|----|----|----|----|----|----|-----|-----|-----|
| Standard | 8' | 20 | 30 | 40 | 50 | 60 | 70 | 80 | 90 | 100 | 110 | 120 |
| ALLOWABLE SPAN (FT)* | 10' | | | | | | | | | | | |
| | 12' | | | | | | | | | | | |
| | *CANTILEVERS are not to exceed 3" | | | | | | | | | | | |

Calculations are using L/180 deflection limits

| SUBSTRATE TYPE | SUBSTRATE REQUIREMENTS | ANCHOR DESCRIPTION | MIN. EMBEDMENT | MIN. EDGE DISTANCE |
|-------------------------|---|---|--|--------------------|
| WOOD | Min. specific gravity = 0.55 wood | #12 Pan Head or Flanged Hex Head Wood Screw | 1-1/2" | 1" |
| STEEL | Min. 18 ga., Min. Fy=36 ksi. | #12 Self-Drilling or Self-Tapping Screw | 3 threads penetration past metal structure | 1/2" |
| ALUMINUM | Min. 1/8", Min. 8063-T5 | Pan Head or Flanged Hex Head Wood Screw (Grade 5) | | |
| CONCRETE | Min. 3000 psi | 3/16" ITW Tapcon | 1-1/2" | 1-3/4" |
| HOLLOW/GROUT-FILLED CMU | Conforms to ASTM C-90, with Min. compressive strength of 2000 psi | | 1" | 2" |

GENERAL NOTES:

1. Adequacy of the structural concrete/masonry and 2X framing as a main wind force resisting system capable of withstanding and transferring applied product loads to the foundation is the responsibility of the engineer or architect of record for the project of installation.
2. Substrate shall be designed and anchored to properly transfer all loads to the structure. Buck design and installation is the responsibility of the engineer or architect of record for the project of installation.
3. The installation details described herein are generic and may not reflect actual conditions for a specific site. If site conditions cause installation to deviate from the requirements detailed herein, a licensed engineer or architect shall prepare site specific documents for use with this document.
4. Link & Lock is not designed to be a life-safety item. Designs of this nature are the responsibility of the engineer or architect of record.

INSTALLATION NOTES:

1. One (1) installation anchor is required at each location. Minimum of two (2) anchors per batten.
2. Spacing is from fastener center to center.
3. The number of installation anchors per the table is the minimum number of anchors to be used for product installation.
4. Install individual installation anchors within a tolerance of +/- 1/2" of the specified spacings. Tolerances are not cumulative from one installation anchor to the next.
5. Minimum embedment and edge distance exclude wall finishes, including but not limited to stucco, foam, brick veneer, sheathing and siding.
6. Installation anchors and associated hardware must be made of corrosion resistant material or have a corrosion resistant coating. Common fastener types can be equal or better to a & b listed below:
 - a. Zinc plated fasteners for moderate climate zones
 - b. 316 Stainless Steel fasteners for coastal climate zones
7. For hollow block and grout filled CMU block, do not install installation anchors into mortar joints. Edge distance is measured from free edge of block or edge of mortar joint into face shell of block.
8. Installation anchors shall be installed in accordance with anchor manufacturer's installation instructions, and anchors shall not be used in substrates with strengths less than the minimum strength specified by the anchor manufacturer.

Sound Absorption (NRC & SAA)



| Metal Linear Ceilings -Open Joint Systems | Backer (Insulation) | NRC | SAA |
|--|---------------------------------------|------|------|
| PROVIDED BY LONGBOARD | | | |
| 6" Link & Lock Baffles | No Backer | 0.10 | 0.12 |
| LONGBOARD BAFFLES WITH BACKER PROVIDED BY OTHERS | | | |
| 6" Link & Lock Baffles @ 6" O.C. | Fiberglass 1" thickness @ 3lbs/ft3 | 0.80 | 0.81 |

The test reported in this document conformed explicitly with ASTM C423-17: "Standard Test Method for Sound Absorption and Sound Absorption Coefficients by the Reverberation Room Method."

Proper Handling of Longboard Products



To help avoid injury and product damage, Longboard products require proper handling to and from storage areas during installation. When carrying or installing any products it is recommended that they be moved or carried by at least two people with each support point approximately 4ft from the ends. **Carrying products without proper support can cause excessive bending which may damage the appearance or finish of the product.** Any short cut lengths should also be carried on edge while supporting the material. See below for details.

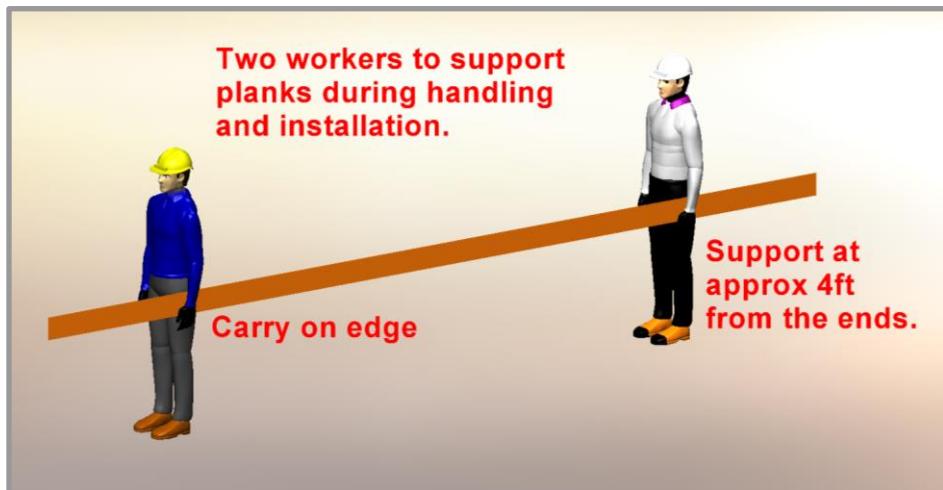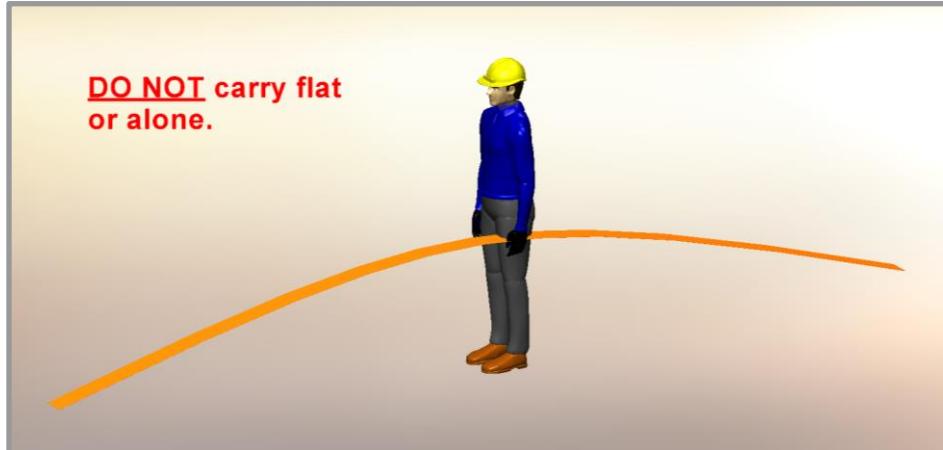

⚠ Delivery, Storage & Handling ⚠

- Always inspect the delivery for damage and contact LB ASAP if there are any issues: info@longboardproducts.com or 1-800-604-0343 and include your PO# and any pictures if possible. Longboard is not responsible for the installation of blemished or damaged material.
- Be sure to store the material flat, keep it dry, safe & secure and remain in unopened cartons until ready to be installed.
- Always wear appropriate PPE when handling products.

Longboard Architectural Products Inc.

© Longboard Architectural Products Inc. All rights reserved.

Longboard® is a registered trademark of Longboard Architectural Products Inc.

Longboard
1777 Clearbrook Road
Abbotsford, BC V2T 8X8
Canada
longboardproducts.com

Every effort has been made to ensure that the information in these installation guidelines is accurate. Longboard is not responsible for printing or clerical errors.

For more information, contact client care at info@longboardproducts.com or call toll free 1-800-604-0343.